


**GRA & AFCH**

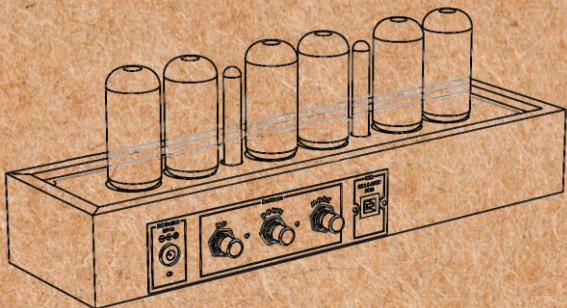

*Divergence  
Meter*

**NIXIE CLOCK**

**OPERATING INSTRUCTION**

**2036**

Release 1.0

## GENERAL GUIDE

1. Press “Mode” to change from mode to mode. Each mode is explained in detail on the following pages.

### TIMEKEEPING MODE

#### To set the digital time

1. Hold down “Mode” while in the Timekeeping Mode until the hours digits start to flash. The hours flash because they *are selected*.
2. Press “Mode” to change the selection in the following sequence:



- Once you reach the Timekeeping display, you have to hold down “Mode” again to display flashing hours.
  - While the digits are selected (flashing), hold down “Mode” to return in Timekeeping Mode without saving.
3. While any digits are selected, press “Up” to increase the number, or “Down” to


decrease the number. Holding down “Up” or “Down” changes the current selection at high speed.

4. After you set the time, press “Mode” to select the Timekeeping Mode.
  - If you do not operate any button for a few minutes while selection is flashing, the flashing stops and the clock goes back to the Timekeeping Mode automatically.

## DATE MODE

### To set the date

1. Hold down “Mode” while in the Date Mode until the days digits start to flash. The days digits flash because they *are selected*.
2. Press “Mode” to change selection in following sequence:

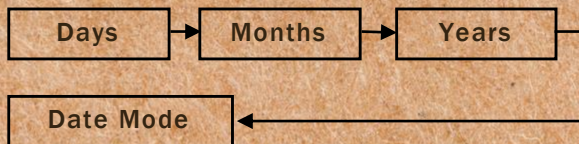

- Once you reach the Date Mode, you have to hold down “Mode” again to display the flashing days.

- While the digits are selected (flashing), hold down “Mode” to return in Timekeeping Mode without saving.
3. While any digits are selected, press “Up” to increase the number, or “Down” to decrease the number. Holding down “Up” or “Down” changes the current selection at high speed.
  4. After you set the date, press “Mode” to select the Date Mode.
    - If you do not operate any button for a few minutes while a selection is flashing, the flashing stops and clock goes back to the Date Mode automatically.
    - The clock does not make validation for correct date. So clock not to return to Date Mode if date is incorrect.

## **LED Backlight**

### **To disable LED backlight**

1. Hold down “Down” until the LED backlight turns off.

### **To enable LED backlight**

2. Hold down “Up” until the LED backlight turns off.